




CalidoRay Underwater Lighting

INSTALLATION AND MAINTENANCE INSTRUCTIONS

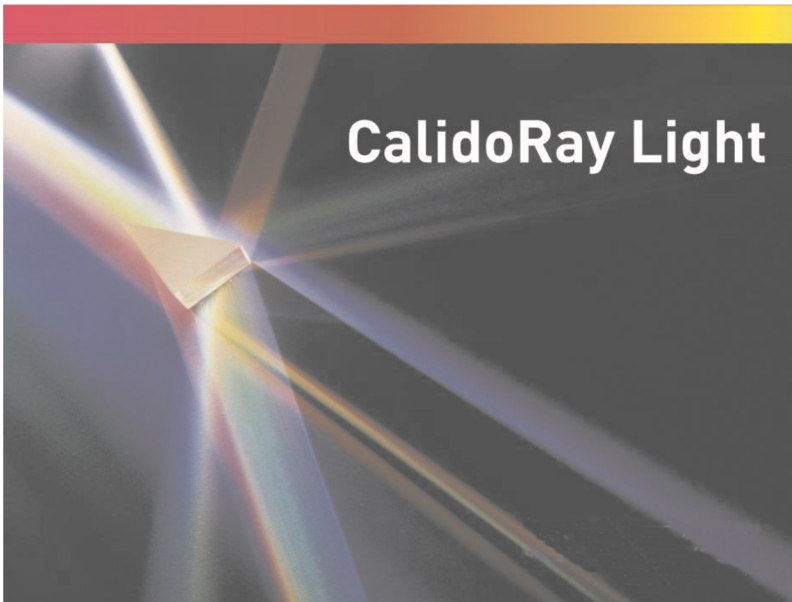

INTRODUCTION

Congratulations! You have purchased a high quality CalidoRay underwater light . Please read the instructions carefully and your purchase will provide you with years of trouble free use.

Note:

- The appliance is not intended for use by young children or infirm person without supervision. Please ensure that young children are supervised to ensure that they do not play with the appliance.
- If the external flexible or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacture or his service agent or a similar qualified person in order to avoid hazard.

COMPONENTS INCLUDED

1 x CalidoRay Underwater Light (fitted with either LED or Xenon Lamp)
1 x Power Transformer
1 x Wall Conduit (if concrete model)
3 x Coloured lens

ELECTRICAL SPECIFICATIONS

Rated voltage:	AC12V 50Hz	
Power:	Halogen Max 50W	<input type="checkbox"/>
	LED Max 12W	<input type="checkbox"/>

Protection: Class III IP68




TO BE USED ONLY WITH A SECURITY TRANSFORMER

THE UNDERWATER LIGHT NEVER TO BE SWITCHED ON IF IT IS NOT SUBMERGED


INSTALLATION OF LIGHT (FIBREGLASS)

1. Locate position in pool that lights are to be mounted. The fitting should be performed to position the light approximately 300mm below the water level of the pool during normal operation. Do not install lower than 430mm below pool edge otherwise cable will not be sufficient to bring light up to pool deck for lamp replacement.
2. Using a hole saw, cut 60mm diameter hole at the light location. Once cut, clean hole to ensure no debris or burrs are remaining.
3. Fit CalidoRay light through hole in pool shell ensuring rubber seal is on the water side of the pool shell. Run a line of silicon around the hole on the outside of the pool shell then tighten nut up onto the thread of the light body.
4. The light transformer has an IP44 rating which allows installation in Zone 2 of the pool area (a minimum of 2m from the waters edge). The transformer should be installed in a suitable position at least 1.2m above ground level and in accordance with all local, state and national wiring standards.
5. Connect cable from light to light transformer. The transformer is not polarity sensitive and either wire can be connected to either terminal.

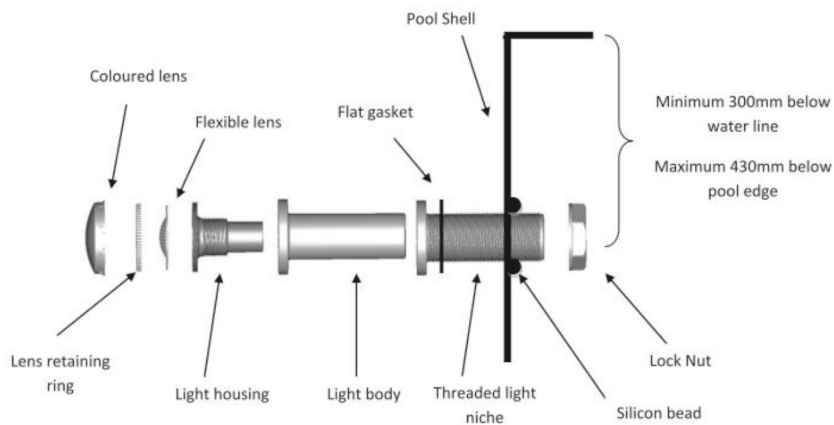

INSTALLATION OF LIGHT (CONCRETE)

1. Locate position in pool that lights are to be mounted. The fitting should be performed to position the light approximately 300mm below the water level of the pool during normal operation. Do not install lower than 430mm below pool edge otherwise cable will not be sufficient to bring light up to pool deck for lamp replacement.
2. Fit CalidoRay concrete wall conduit into steel work marking sure it is secure and will not move during concrete pour. Ensure cap is fitted to conduit prior to concreting. **Note: There are indicators on the side of the conduit to guide depth inside the wall. It is important to have a minimum of 180mm from the rear of the conduit to the front of the pool wall.**
3. After concrete pour cut conduit flush to pool surface.
4. Fit light into wall conduit and glue into place prior to commencing pool surface finish.
5. The light transformer has an IP44 rating which allows installation in Zone 2 of the pool area (a minimum of 2m from the waters edge). The transformer should be installed in a suitable position at least 1.2m above ground level and in accordance with all local, state and national wiring standards.
6. Connect cable from light to light transformer. The transformer is not polarity sensitive and either wire can be connected to either terminal.

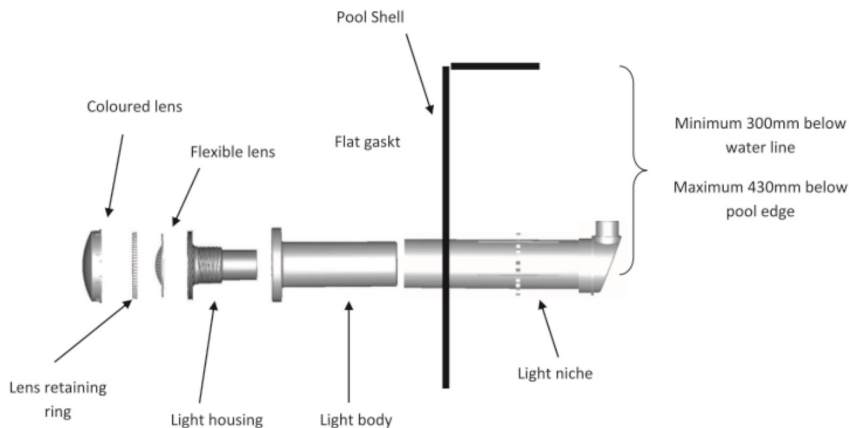

REPLACEMENT OF LAMP (LED OR XENON)

1. Remove clip on lens from front of CalidoRay light. Grip front of light and turn in anti-clockwise direction to remove light from the housing. Bring light up to above water level.
2. Undo screws from flexible lens ring and remove lens and ring.
3. Replace lamp ensuring no moisture is present inside the housing. It is important to replace the o'ring seal each time the light housing is opened.
4. Replace lens and ring on front of light and tighten screws. (Ensure o'ring remains in place)
5. Feed cable back into light housing and tighten body into place by turning in a clockwise direction.

WARRANTY – CALIDORAY LIGHTS

WARRANTY

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship during the warranty period. The warranty periods are set out after goods left our company.

Parts	Warranty Period
Transformer and molded parts	12 months
Lamp	12 months

If a defect appears in the Product before the end of the warranty period, We will, in its sole discretion, either:

- (a) replace or repair the Product or the defective part of the Product free of charge; or
- (b) cause the Product or the defective part of the Product to be replaced or repaired by an Authorised We service Agent free of charge.

We service the right to replace defective parts of the Product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

WARRANTY CLAIMS

1. If a fault covered by warranty occurs, the customer must first contact us at the contact address listed below, or an Authorised Service Agent.
2. Any warranty claim must be accompanied by:
 - (a) proof of purchase;
 - (b) full details of the alleged defect; and
 - (c) appropriate documentation (such as historical and maintenance records).
3. The customer must make the Product available to us or Authorised Service Agent for inspection and testing. We or Authorised Service Agent will attend the premises where the Product is installed for inspection and testing. If the Product is installed:
 - (a) outside a capital city metropolitan area; and
 - (b) is not within a 20 km radius of an Authorised Service Agent;then the customer may have to pay a travel fee.
4. If such inspection and testing finds no defect in the Product, the customer must pay usual costs of service work and testing. If such inspection and testing finds a defect that is not covered by this warranty, the customer must pay usual costs of service work plus any parts and labour required to repair the Product,

Exclusions

The warranty will not apply where:

- (a) the customer is in breach of the Terms and Conditions of Sale;
- (b) the Product was used for a purpose other than one it was intended for;
- (c) the Product was repaired, modified or altered by any person other than us or authorised service agent;
- (d) the Product has not been installed, maintained and/or operated in complete compliance with the installation and operating instructions and any instructions;
- (e) the Product has been subject to accident, negligence, alteration, abuse or misuse.

The warranty does not extend to:

- a) normal wear and tear;
- b) weather and other environmental conditions including but not limited to storm, flood, and/or heat wave damage; or
- c) service and maintenance items.

Examples of exclusions include but are not limited to:

- water ingress to transformer
- lamp failure

Commercial Installations

On commercial installations, such as health clubs, motels/hotels and hydrotherapy facilities, the warranty is limited to parts and in field labour (within capital city metropolitan areas or 20 km radius of Authorised AstralPool Service Agents) for a period of 12 months from the date of purchase.

LIMITATIONS

We make no express warranties or representations other than set out in this warranty.

The repair or replacement of the Product or part of the Product is the absolute limit of our liability under this express warranty.

